

Sprinkler Zones and Heads Mapping
Updated 9-24-2009

Sprinkler Zones

Zone 1 - Island in Center of Community - ZONE HAS 17 ROTOR HEADS AND RUNS @ 40 LBS PRESSURE

Zone 2 - West Side Front - Grass by Road - ZONE HAS 11 HEADS (ROTOR AND/OR SPRAY).

Zone cannot be run individually as it would run at 60 lbs of pressure.

Zone 2 has been combined with Zone 5.

Zone 3 - Around the Fenced Area except not the drip system

and East Side Shrubs (by Fence) - ZONE HAS TOTAL OF 26 SPRAY HEADS AND RUNS @ 35 LBS PRESSURE

Zone 4 - West Side Shrubs (by Fence) - ZONE HAS TOTAL OF 27 SPRAY HEADS AND RUNS @ 35 LBS PRESSURE

Zone 5 - East Side Front - Grass by Road -ZONE HAS ONLY 6 ROTOR HEADS.

Zone cannot be run individually as it would run at 90 lbs of pressure.

Zone 5 has had Zone 2 added - both run off this Zone. Pressure for combined zones is approx 40 LBS.


Zone 6 - Not Used. Was drip system that has been removed as drip system was running at > 100 lbs pressure.

Zone 7 - Hose - CAN ONLY BE USED IF ANOTHER ZONE IS RUNNING AND/OR "Y" TAP OPEN TO KEEP PRESSURE DOWN


This zone is pressurized anytime the pump is "on"

Zone 8 - N/A


ZONE 1 - ISLAND SPRINKLER HEADS

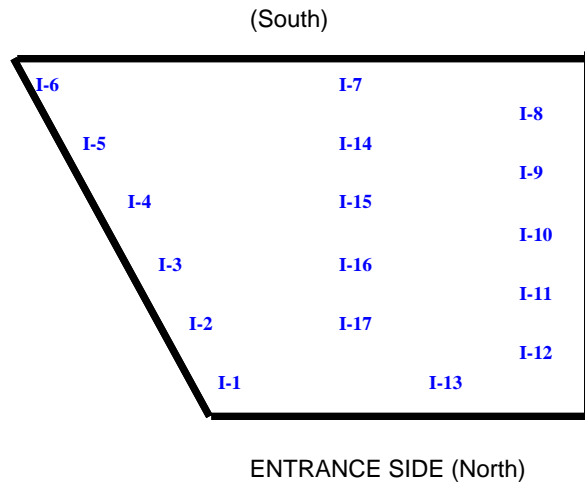


ZONE 2 - WEST SIDE GRASS

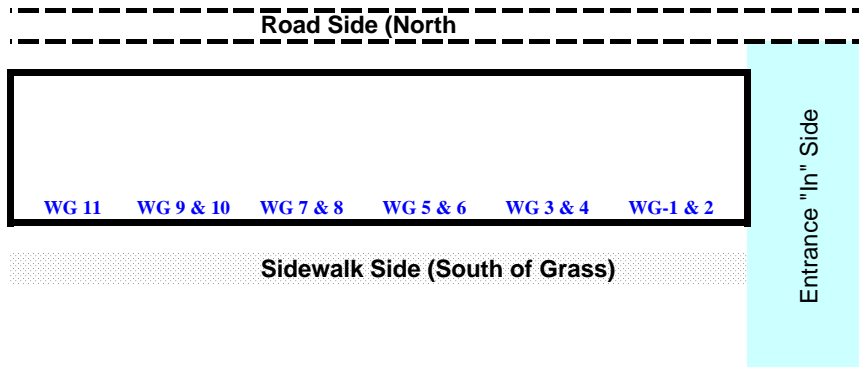

ZONE 3 - ENTRANCE ISLAND AND EAST SHRUBS

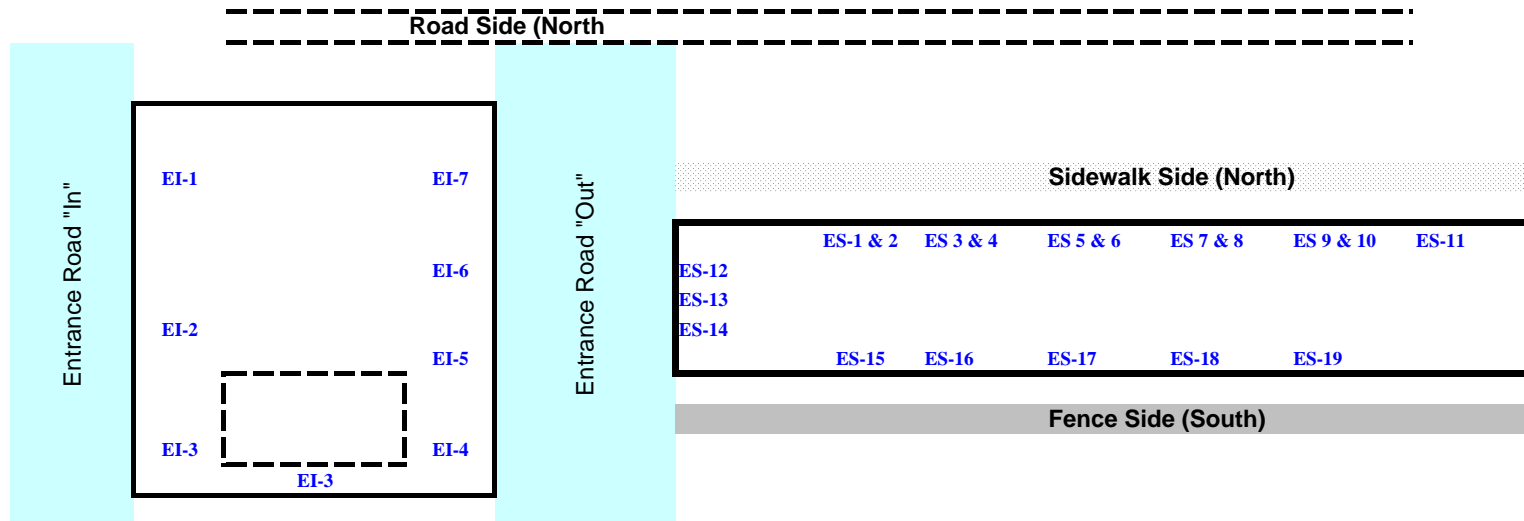

ZONE 4 - WEST SHRUBS

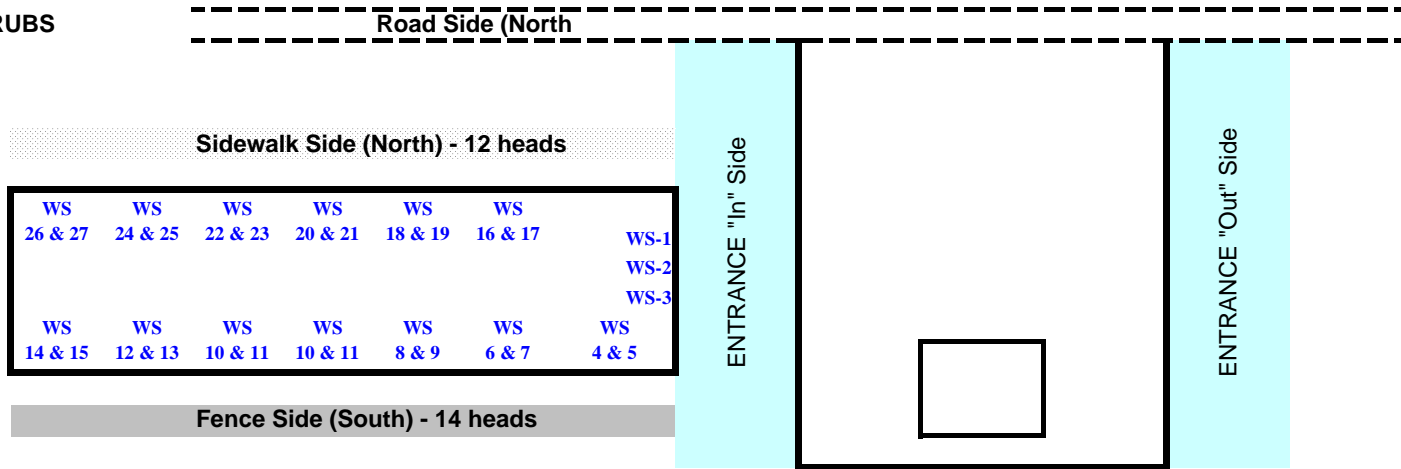

ZONE 5 - EAST GRASS

